

SIMONSEN BB-200















Instruction manual – English

Käyttöohje – Suomi

Brukermanual – Norsk/Dansk

Användarhandledning – Svensk

Product safety information

	Please read these simple guidelines. Not following them may be dangerous or illegal
	Switch off the phone in the vicinity of chemical plants, gas stations and other locations containing explosive objects.
	Keep the phone far away from children.
	When driving, please use the hands free calling device (purchased separately) to ensure safety. Please park the car at roadside for communication unless in emergency.
	Switch off the phone when boarding an airplane and do not switch the phone on during the flight.
	Be careful when using the mobile phone in the vicinity of such devices as pacemakers, hearing aids and other electro-medical equipment, which may be interfered by the mobile phone.
	No guarantee for the accessories and parts not produced by the original factory.
	Never attempt to disassemble the phone by yourself. Contact the supplier in case of any trouble with your mobile phone.
	Do not recharge the phone without battery being installed.
	Charge the phone in well-ventilated environment and keep away from inflammable and high explosive articles.
	To avoid demagnetization, keep the handset away from magnetic substances, such as magnetic discs or credit cards.
	Keep the phone away from liquid. If soaking or erosion occurs, take the battery out and contact the supplier.
	Avoid using the phone in too high or too low temperature environments. Never leave the phone exposed under direct sunlight, in high humidity or in a dusty environment.
	Do not use liquid or a damp cloth with strong detergents to clean the handset.

Your phone



1	Torch light	2	Earpiece	3	Main Screen
4	Up Button	5	Send key	6	End key
7	Down Button	8	Keypad	9	MIC
10	Charging/Headset Interface	11	Indicator Light	12	Torch Button
13	SOS Key	14	Battery Cover	15	UP/DOWN Side Button

This phone has the following keys:

No.	Name	Annotations
1	Send key	Dial or answer a call. In the standby state, press the key to enter Call Records menu.
2	End key	End a call. Long press this key to turn on or off the phone. In the Functions list status, return the last menu.

3	Up/Down Key	Used to scroll the functions list in main menu. In Edit mode, move the cursor. In the standby mode, press up or down key to enter main menu or love number menu.
4	Keypad	Used to input numbers, letters and some characters. In standby mode, press and hold # key to open vibrant profiles; Press and hold the Key "0" to switch on/off the Hearing aid function. In the Edit screen, press # to change the input method; press * to switch to the Symbol Input interface.
5	Torch Button	Push Upward or Downward to turn on or off the Torch light.
6	SOS Key	Press and hold the SOS Shortcut Key for 3s to dial SOS number.
7	UP/DOWN Side Button	You can scroll up or down audio volume during conversation with the key.

Screen Icons



Received signal strength



Earphone



New Short Message



Alarm on



International Roam



Call divert (Changing by line)



Battery power level



Silence




Vibration

Battery

The lithium battery of the mobile phone can be immediately used after unpacking. A new battery performs best after performing a full charge/discharge 3 times.

Installing the battery

1. Insert the battery by aligning the gold contacts in the battery compartment on the phone.
2. Push down on the upper section of the battery until it clicks into place.

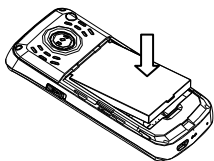

Pull down the battery



Push up the cover



Removing the battery

1. Switch off the phone.
2. Remove the battery cover.
3. Pull the battery up and remove it.

Inserting the SIM card

Insert the SIM card as following steps:

- Switch off the phone and disconnect it from the charger.
- Remove the battery cover and checkout the battery.
- Hold your SIM card with the chamfer oriented as following picture and slide it into the card holder with metal interface down.
- Replace the battery and its cover.

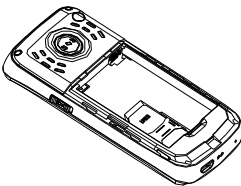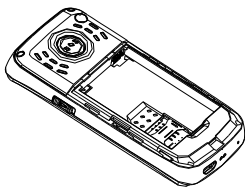

SIM card

Every mobile phone has a SIM card (Subscriber Identity Module). This is a micro-chip that holds your personal information such as names and phone numbers. Your phone won't work without it. If you already have contacts on


your SIM card, they can be transferred in most cases.

Charging the battery (Two Methods)

Charging the battery as following steps:


Method 1:

- Connect the adaptor to a wall outlet.
- Connect micro USB of the adaptor to the Cradle.

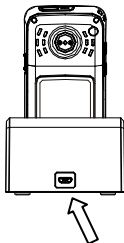

Method 2:

- Connect the adaptor to a wall outlet.
- Connect micro USB of the adaptor to the care phone. The battery indicator bar starts scrolling. When the battery is fully charged, the bar stops scrolling.
- When the battery is fully charge, disconnect the adaptor.

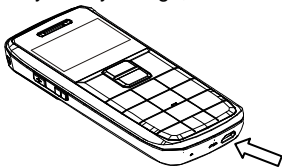

Note: charge the battery at least 12 hours for the first time.

Power on/off

Hold End key to Power on/off the phone.

Note: Make sure the SIM card and the battery have been inserted before booting.

Menu tree

1. Phone Book ➤ Phone Book ➤ Love Number	3. Call Records ➤ Incoming Calls ➤ Outgoing Calls ➤ Missed Calls ➤ Delete ➤ Call Duration	6.Profiles ➤ Standard ➤ Conference ➤ Outdoor ➤ Silence ➤ Headset
2. Message ➤ Write Message ➤ Inbox ➤ Outbox ➤ Drafts ➤ Voice Mail ➤ Broadcast Message ➤ Delete All ➤ Check Storage ➤ Message Counter ➤ Message Setup ➤ SIM Tool Kit	4. Alarm 5. Tools ➤ Calendar ➤ To Do List ➤ Calculator ➤ Convertor ➤ World Clock	7.Settings ➤ Clock settings ➤ SOS Settings ➤ Phone Settings ➤ Call Settings ➤ Network Settings ➤ Security ➤ Factory Default

Write Text

Change input mode: press # key to change the input mode (Eng, Abc, abc, ABC, 123)

ABC, Abc and abc input: press the number keys 2-9 to input letters. Input the characters followed the order of letters on the keys. Press the key once to input the first letter, press it twice to input the second one and so on.

In the Eng input, When entering a word, you only need to enter the target key once, the phone will present those possible matches by use of the association function; you can press the Up/Down key to select your desired word, and press Send key or * key to confirm to select the cursor character; press # key in turn to switch the current word between abc/ Abc/ ABC.

123 input: Press the keys to input the corresponding numbers.

Input Symbol: Press the ""*""key to select the symbol.

Input Space: Press key '0' to input space, it does not input space in 123 mode.

Delete Character: Press End key to clear a character in the front of cursor. Press and hold End key to delete all characters in the front of cursor

Move cursor: Press the Up or Down key to move the cursor left or right.

Adding phone book

You can save names and phone numbers in the phone and SIM card memory.

- **Menu**→ **Phone Book**→ **Phone Book**.
- Press Send key and select **Create**.
- Select **Save to SIM** or **Save to Phone**.

- Enter the contact's phone name and press Send key to confirm.
- Enter the number and confirm it by Send key.

Making and receiving call

Dialing a Number

- In standby mode, enter the telephone number and press the Send Key to dial.
- Press End key to end the call.

Dialing a Number stored in Phone Book

Searching desired number in Phone Book List: Input character contained in the initial letter of the desired name, and then press Up/Down Key to find out the desired. Then press Send Key to enter it.

Press Down Key choose Dial and then press Send Key to dial.

Dialing a Number stored in Call Records

Menu→ Call Records →Incoming Calls/Outgoing Calls/Missed Calls. Or press Send Key enter the Call Records interface. Choose Incoming Calls/Outgoing Calls/Missed Calls.

Press Up/Down Key to select your desired number, Press the Send Key to dial the number.

Speed Dial

Edit the speed dial numbers in "Menu→ Settings→ Phone Settings→ Speed Dial".

In Standby state, hold on press the numerals (2~9), you can dial out the number when you set in the Speed Dial submenu.

Adjusting Volume

Press the Up and Down key to adjust the volume directly during a call.

Answering a Call

The phone will ring or vibrate when call coming.

- Press Send Key to answer it.
- Press End key directly to refuse it.
- Press End key to end it during calling.

Sending text message

1. **Menu→ Message→ Write Message.**
2. Write text message. For more information on writing, refer to section 'writing text'.
3. Send: press Send key to do as follow.
 - Select **Send** to send the message to one person;
 - Select **Send and Save** to send and save it into Outbox;

- Select **Send to Many** to send it to more than one person, and select the names from the phone book list;
- Select **Save** to save it to drafts.

Receiving text message

Once receiving a message, the mobile phone will ring, prompt, and show off a new message icon.

1. Press Send key to enter receiver message list, Use Up or Down key to select one message, press send key again to read the message.
2. Use Up or Down key to read the message.
3. Press Send key to **Text Reply, Delete, Extract Number, Forward, Edit** or **Dial Back**.

Key lock

In the standby mode, Press Send key and then press the “*” key to lock up the keypad. while press the Send key, and then press the “*” key to unlock it. (note: the interval must less than 2s)

SMS Remote Control Function

One may through another handset SMS remote control another mobile phone, be possible the remote control set Love Number, remote control to establish one to seek help the number, the remote control increase the telephone number, the remote control establishment alarm clock which saves on the handset.

Setting Love Number

Edit: AT+L: name: num: password

[For example:] AT+L: Jack: 1333333333:1234

Jack's Love Number is 1333333333.

The maximum storage is 5 Love Numbers. If a Love Number set by remote SMS and this entry has the same name but with different number, the old Love Number will be replaced by the new one.

Note: when the phone had saved up to 5 love numbers, If user want to add another love number with the same name but different number, then the old love number will be replaced by the new one, but if the love number is new, the care phone would prompt you that whether to replace exist one

Setting SOS Number

Edit: AT+S: name: num: password

[For example:] AT+S: Jack: 1333333333:1234

Jack' SOS Number is 13333333333.

Note: when the phone had saved up to 5 SOS numbers, If user want to add another SOS number with the same name but different number, then the old SOS number will be replaced by the new one, but if the SOS number is new, the care phone would prompt you that whether to replace exist one

Adding New Entry

Edit: AT+P: name: num: password

[For example:] AT+P: Jack: 13333333333:1234

Jack' new entry is 13333333333.

If this entry has the same name but with different number, the old number will be replaced by the new one.

Setting Alarm

Edit: AT+A:hh: mm: content: password

[For example:] AT+A:06:30: Good Morning :1234

The alarm time is 6:30. The content is "Good Morning".

After editing content which must be input, press End key to decide whether "Save".

- 1) Time Format must be 24-hour.
- 2) The content: The character's limit is 70.

Note:

- The password default 1234. (It can change in Menu→ Settings→ Security→Change Remote Control Code)
- Above letters (AT+L, AT+S, AT+P, AT+A) need input Capital characters.
- **Name:** if the character of name exceed to 30 characters, it will cut the character from 31st;
- **Number:** if the character of number exceed to 40 characters, it will cut from 41st;
- After care phone had receive remote control message, it would send a report about successfully or unsuccessfully to controlling side

Shortcut Key

Electric Torch Shortcut Key

Press the Torch button up/down to switch on/off the electric torch.

Hearing aid Shortcut Key

Press and hold the Key "0" to switch on/off the **Hearing aid function**. The **Hearing aid** can be activated until you plug into headset.

Love Number Shortcut Key

Press Down Key to get the love number lists in standby mode and press the Up or Down key to select the desired one. When you view love number, you can press Send key to do as follow:

Dial: Dial out the love number.

Edit: Edit Love Number. You can Input the number and then Input the name.

Press the Send Key preservation, presses the End key not to preserve the establishment.

Delete: You can press the Send key to delete the current love number when select delete, Press the End key to return to the previous.

SOS Shortcut Key

Press and hold the SOS Shortcut Key for 3s to dial the SOS number under any condition, even the phone locked.

Attention:

1. The 'SOS' holds a maximum of five SOS number.
2. The phone will dial out automatically and sound a note of warning last 3 seconds by pressing the SOS key without release. If the press is a misoperation, press the End key to cancel the misoperation.
3. If the SOS number is dialed out, the phone will send message firstly. It will turn into calling link state after the message being sent out successfully or fail. The phone will turn into hand free mode if the call connected.
4. If the SOS number. Can't be connected, the phone will dial next 'SOS' number out until the call connected. If no 'SOS' number answers, the phone will dial out last 2 times.
5. The SOS operation can be cancelled by pressing the 'End' key.
6. If the number is empty or you want to edit the SOS Number, you can go to Menu→ Settings→ SOS Settings to set it as follows.

SOS Settings

It can be set On or Off.

SOS Number

In SOS Number list, total 5. You can press the Send key to select Edit or Delete.

SOS Light

It can be set On or Off.

SMS Reminder

It can be set On or Off.

SOS Message:

The message can be edited. The default message is “Help!”.

Menu functions

Function	Description	Selection
Add new phone book	Add the new contacts to phone book	Menu→ Phone Book→ Phone Book→ Create
Edit phone book	Edit phone book	Menu→ Phone Book→ Phone Book →Search→ Option →Edit
Send message	Send text message to mobile phone	Menu→ Message →Write Message→ Option→ Send
Read message	View the received, sent, save message	Menu→Message →Inbox/Outbox/Drafts
Voice mail	Receive and listen to voice message	Menu→ Message →Voice Mail
Message Setup	The settings about message	Menu→ Message →Message Setup
Recent calls	View all recent calls	Menu→ Call Records →Incoming Calls/Outgoing Calls/Missed Calls.
Call duration	View call duration	Menu→ Call Records →Call Duration
Alarm	Set alarm alert time	Menu→ Alarm
Calendar	View Calendar	Menu→ Tools→ Calendar
To Do List	To record and view to do list	Menu→Tools→To Do List
Calculator	A calculator	Menu→ Tools→Calculator
Convertor	By use of this function, you can convert Land measure, Currency, Volume, Velocity, Time, Temperature, Pressure, Power, Quality, Length, Energy, etc.	Menu→ Tools→Convertor
World Clock	Only for you view the world clock.	Menu→ Tools→ World Clock
Profiles	Ring Tone, SMS Alert Tone, Alarm Tone, Alert Type, Ring Tone Volume, SMS Tone Volume, Power On Volume, Power Off Volume, Volume of Voice Calling Report, Key Volume, Vibration, Personalize profiles	Menu→Profiles
Time and date	Set date and time	Menu→ Settings→ Clock settings→ Date and Time Settings
Language	Set the phone language	Menu→ Settings→ Phone Settings→

		Language
Speed Dial	Set speed dial numbers that you can dial the number of setting by long pressing number key in the standby state.	Menu→ Settings→ Phone Settings→ Speed Dial
Call Waiting	Hold the first call and answer the second call(need network support)	Menu→ Settings→ Call Settings→ Call Waiting
Call Divert	Divert the incoming calls to other preset numbers(need network support)	Menu→ Settings→ Call Settings→ Call Divert
Call Barring	Prevent incoming or outgoing calls based on user-defined conditions(need network support).	Menu→ Settings→ Call Settings→ Call Barring
Caller Line Identification Restrict	If select ON means restrict display your incoming number on called side, else display your number normally(need network support).	Menu→ Settings→ Call Settings→ CLIR
Auto Redial	Turn on or off Auto Redial	Menu→ Settings→ Call Settings→ Auto Redial
Network Setting	Set network searching mode	Menu→ Settings→ Network Settings→ Network Select
Security Setting	Access your phone's Security setting, the password default 1234.	Menu→ Settings→ Security
Restore Factory Settings	Restore to original factory setting. If the phone set restore factory, the phone will clew input password, the password default 1234.	Menu→ Settings→ Factory Default

Basic Spec

Network: GSM 900MHz/DCS1800 MHz Dual Band

Dimension: 108mm*50.6mm*14.8mm

Battery: 600mAh

Power Adapter: AC 100V~240V 50Hz/60Hz, DC 5.25V 0.6A

Operation Temperature: -10°C ~ +40°C

Ambient Humidity: 10~95%

Storage Temperature: -30°C~ +60°C

Circumstance noise: ≤60dB(A)

Pressure: 86~106Kpa

Waiting time: About 150hours*

Talk time: About 3~4 hours*

*Variation in operation times may occur depending on SIM card, network, and usage settings, usage style and environments.

Packing list

Check all the components according to the packing list when you open the package. Please contact with the dealer or seller in time when you find some missing or destroyed.

- Handset
- Cradle
- Adaptor
- Battery
- Earplug
- Manual

Care and Maintenance

Battery and Charger Safety

- Only use battery and charger approved by the phone manufacturer.
- Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles.
- The charging time depends on the charger and the battery used.
- The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery.
- If unused, a fully charged battery will lose its charge.
- When the charger is not disconnecting it from the power source. Do not leave the battery connected to the charger and power source for longer than necessary as overcharging it will shorten its life.
- Leaving the battery in hot or cold place, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object causes a direct connection between the + and – terminals of the battery. Short-circuiting the terminals may damage the battery or the mobile phone.
- Do not dispose of the battery in a fire.

Phone Maintenance

Your device is a product of superior design and chairmanship and should be treated with care. The suggestions below will help you protect your warranty coverage.

Keep the phone and all the parts and accessories (for example, SIM card)

out of the reach of small children.

Do not use or store the phone in dusty or dirty locations. Its moving parts and electronic components can be damaged.

Do not use or store the phone in excessively hot places. High temperatures will shorten the life-span of the phone, damage the battery, and warp or melt the plastic used in the phone's manufacture.

Do not store the phone in excessively cold places. When the phone returns to its normal temperature, moisture can form inside the phone, causing damage to the electronic circuits.

Do not mishandle or abuse the phone. Dropping, knocking or shaking it can damage the internal circuits.

Do not use harsh chemicals, strong detergents, or cleaning solvents to clean the phone. If you must clean it, then use a soft, clean and dry cloth.

Do not paint the phone. Paint can clog the moving parts and prevent proper operation.

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.

If the phone or any of the accessories are not working as they should, please consult your dealer who can provide you with the expert assistance required.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

FAQ

If your phone appears the questions frequently, please refer to the answers as follows. After that, you cannot solve the questions, please contact with the mobile phone dealers or service provider.

Trouble	Possible reasons
The phone cannot be switched on	<ol style="list-style-type: none">1. Is there any power in the battery?2. Is the battery installed properly?
Battery cannot be charged	<ol style="list-style-type: none">1. Check if the charger is connected with the phone correctly.2. Is the battery usable? The performance of the battery will be reduced after used for several years.3. Is the battery completely discharged? The phone needs to be connected to the charger for a while before it can be charged.
Fails to register to the network	<ol style="list-style-type: none">1. The signal is too weak, or there may be some radio interference around. Check the signal strength meter on the screen to see whether vertical lines are displayed.2. Is the SIM card installed properly, poorly contacted or

	damaged? If the SIM card is damaged, please ask your network operator for replacement.
Cannot call out	<ol style="list-style-type: none"> 1. Is the SIM card registered in the network? 2. Is call barring enabled? 3. Calling prohibited due to call charges not paid? 4. Have you enabled the function of FDN? 5. Have you selected line 2 though your network operator doesn't provide this service?
Cannot call in	<ol style="list-style-type: none"> 1. Is the SIM card registered in the network? 2. Incoming call prohibited due to call charges not paid? 3. Is call diverting enabled? 4. Is the "Bar incoming call" function in call barring enabled?
PIN locked	Input the PUK code supplied with the SIM card to unlock or contact the network operator.
Call charge meter invalid	No metering pulse is transmitted. Please contact your network operator.
SIM error	<ol style="list-style-type: none"> 1. SIM card is dirty. Clean it. 2. Reinstall the SIM card. 3. SIM card is damaged. Replace it.

Appendix II Abbreviations and explanations

GSM---Global System of Mobile Communication.

SIM---Subscriber Identity Module.

PIN--- Personal Identification Number.

Usually refers to PIN1. Supplied with SIM card. Used to unlock the SIM card.

PUK---Personal Unblocking Key.

PUK code and the universal personal unblocking key (UPUK) code (8 digits) are required to change a blocked PIN code and UPIN code, respectively. The PUK2 code is required to change a blocked PIN2 code.

If the codes are not supplied with the SIM card, contact your local service provider for the codes.

Caution

Our company will not take any responsibility for result caused by not following the above suggestion or by improper use.

If the above content in this manual is not accordance with your mobile phone, please subject to your mobile phone.

Our company has the right to subject to amendment without notice.